



# USER/INSTALLATION GUIDE

Kaon Set-Top Box & Remote KSTB2020

# Contents

---

What's in the Box? . . . . .	3
Set-Top Box at a Glance . . . . .	4
Remote Control Functionality . . . . .	5
Button Functionality . . . . .	6
Remote Control Programming. . . . .	8
Self-Install Physical Placement . . . . .	9
Self-Install Connections . . . . .	10
Network Setup . . . . .	11
Initial Box Power On . . . . .	12
Service Validation . . . . .	18
Troubleshooting . . . . .	19
Appendix A: TV Codes for Remote Pairing . . . . .	20
Appendix B: Audio Codes for Remote Pairing. . . . .	30

Copyright © 2021 Kaonmedia Co., Ltd. All Rights Reserved. Kaon and the Kaon logo are registered trademarks of Kaonmedia Co. Ltd. in the United States and other countries.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks remain the property of their respective owners.



# What's in the Box?

---



KTSB2020 SET-TOP BOX (STB)



POWER ADAPTOR



REMOTE CONTROL (RC)



HDMI CABLE



RCA ANALOG COMPOSITE  
BREAKOUT CABLE (OPTIONAL)



BATTERIES

# Set-Top Box at a Glance

## TOP VIEW



### 1 Power Button

Used to power the box On or Off.

## FRONT VIEW



### 2 Status Indicator LED

Indicates power status of box  
(Red = Off, Green = On)

### 3 Infrared (IR) Sensor

Used to communicate with the remote control.

## SIDE VIEW



### 4 USB

This port has an output power capability of 5V DC @ 1 amp.

## REAR VIEW



### 5 RJ45

10/100 Ethernet port used to connect to a home router.

### 6 HDMI

Digital A/V output, used to connect to a TV via HDMI cable.

### 7 AV Out

SD analog A/V output, used to connect to older-style TVs that do not support HDMI connections.

### 8 S/PDIF

Optical audio output, used to connect to external sound bar or surround sound system. An optical cable with TOSLINK connectors is required (not included).

### 9 12V/1.5A In

DC power port, used to connect via the power adaptor.

# Remote Control Functionality

 


## HOT KEYS

The following Hot Keys are dedicated short cuts to return the user to the video service regardless of the content or app being viewed.

- 1 Menu**  
Displays the Main Menu.
- 2 Last**  
Displays the last 15 items that have been watched.
- 3 Home**  
Displays the main Android TV menu including access to apps.
- 4 Guide**  
Displays the Electronic Program Guide (EPG).

# Button Functionality

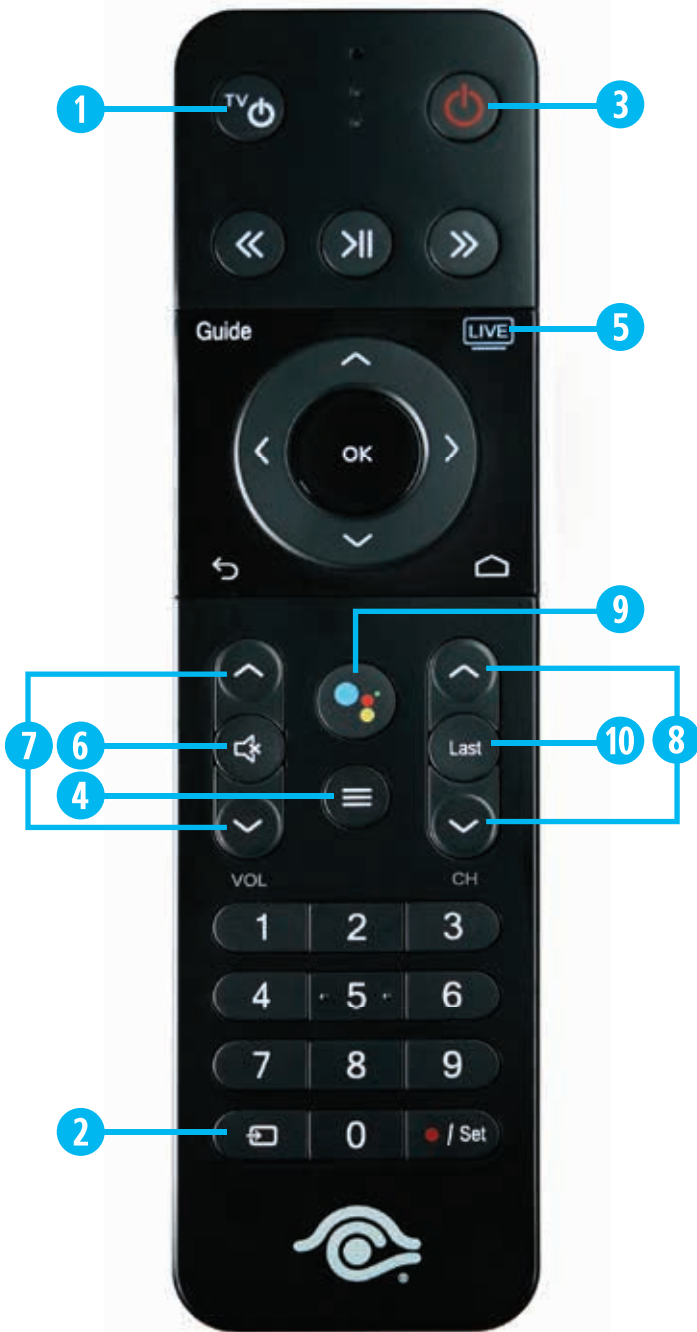

- 1 TV Power**  
Powers on or off TV if remote is programmed with a TV infrared code.
- 2 TV Input**  
Changes video input on TV if remote is programmed with a TV infrared code.
- 3 Power**  
Switches STB power on or into standby/off mode. Will also control TV power and audio system after remote has been programmed with a TV/Audio infrared code.
- 4 Menu**  
Launches the main menu within the app with live video or last viewed on-demand program.
- 5 Live TV**  
Tunes to the last content viewed in the app.
- 6 Mute**  
Mutes the audio on your audio device(s) (TV, audio system, or STB).
- 7 Volume (Up or Down)**  
Increases or decreases volume levels on your audio device(s)
- 8 Channel (Up or Down)**  
Selects the previous and next available channels (hold for rapid advance).
- 9 Google Home**  
Launches Android TV main menu including access to apps. Also launches voice-based Google Assistant search.
- 10 Last**  
Displays the last 15 items that have been watched.



- 11 Back/Exit**  
Returns to previous menu or state within current app. From live video, this button opens the main menu.
- 12 Guide**  
Launches the channel guide (EPG) within the app.
- 13 Arrows**  
Moves to highlight items in respective direction.
- 14 OK**  
Short Press: confirms a selection. When watching a video in the app, info on the current video playing appears, including the time shift bar.  
  
Long Press: invokes the app search menu. This is the same function as the magnifying glass in the main menu.
- 15 Record**  
Begin recording selected content in the app.
- 16 Rewind**  
Rewinds VOD or live TV.
- 17 Play/Pause**  
Play or pause toggle of VOD or live TV
- 18 Fast Forward**  
Fast forwards VOD or live TV
- 19 0-9**  
Enters channel numbers in the guide or full screen video
- 20 Set**  
Setup the remote to control the TV, and to program an audio device with infrared (IR) commands.

# Remote Control Programming

---

## TV Infrared (IR) Remote Programming

The remote control can be manually programmed with a TV IR code. To program this code, use the following sequence:

- Press and hold the **SET** button until the remote LED light turns white.
- Enter the five-digit code (always starting with a 1) as shown in Appendix A on page 20.

Successful programming is indicated by two blinks of the white LED light. Unsuccessful programming is indicated by 2 seconds of red LED light.

## Infrared (IR) Reset

The configured TV IR codes can be reset to its factory default using the following sequence:

- Press and hold the **SET** button until the remote LED light turns white.
- On the remote, press **9 8 6**

Successful programming is indicated by two blinks of the white LED light.

## Send Volume Control to TV or to Other Audio Device

The remote control can be toggled to send volume control to the TV. This function will only be successful when the remote has a valid TV infrared (IR) selection; to send volume control to the TV, use the following sequence:

- Press and hold the **SET** button until the remote LED light turns white.
- Press the **VOL** **▲** button

Successful programming is indicated by two blinks of the white LED light.

## Factory Reset

At any time, the remote control can be returned to the factory reset use the following sequence:

- Press and hold the **SET** button until the remote LED light turns white.
- On the remote, press **9 8 1**

Successful programming is indicated by two blinks of the white LED light.

## Code Search

To search for the remote control code for your TV, use the following sequence:

- Press and hold the **SET** button until the remote LED light turns white.
- On the remote, press **9 9 1**
- Press the **CH** **▲** sequentially until the TV turns off.
- Press the **OK** button to enter this control into the remote.

Successful programming is indicated by two blinks of the white LED light.



# Self-Install Physical Placement

---

The streaming set-top box (STB) should be placed in a location away from direct or indirect heat sources.

## Remote Operating in IR Mode

With the remote operating in IR mode, it is recommended that the STB be placed in sight for the end user. The IR sensor is in the center of the front face plate.



## Remote Operating in RF4CE Mode

With the remote operating in RF mode, the set-top box may be placed out of sight. This may include behind a wall-mounted TV or in a TV cabinet.

## USAGE CONSTRAINTS

### External DVR via USB Drive

 
The USB port cannot be used to connect an external USB drive to support local DVR capability.

# Self-Install Connections

## WHAT YOU NEED


- An HD or Ultra High Definition (UHD) TV that can support 720p, 1080p, or 4K UHD
- A broadband Internet connection that supports a wired or WiFi wireless home network (802.11 g, n, or ac)
- Pay TV operator login credentials (mandatory)
- Google login credentials (optional)

### HDMI Cable Connection

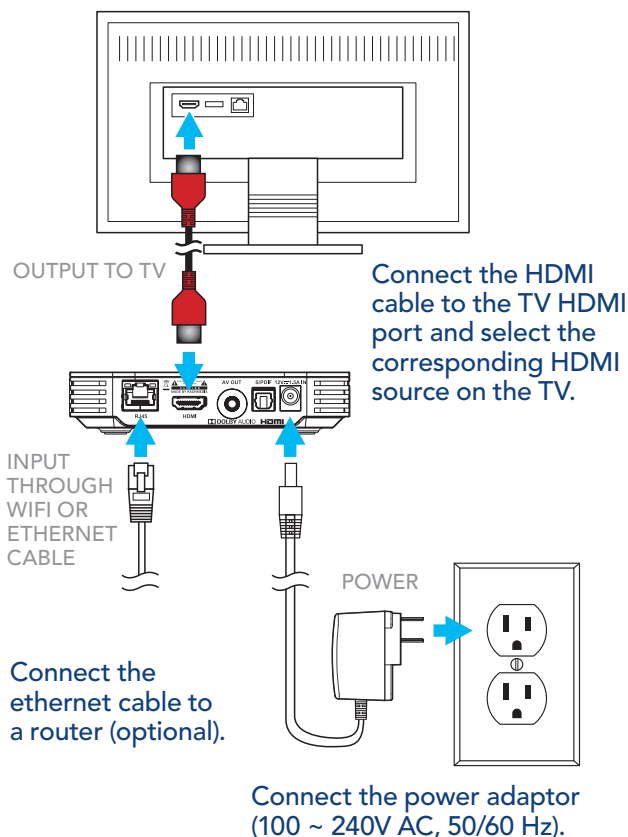

### Analog Composite Breakout Cable Connection

 Connect the analog composite cable as shown below. This connection scheme should only be used if the TV does not have a working HDMI port.

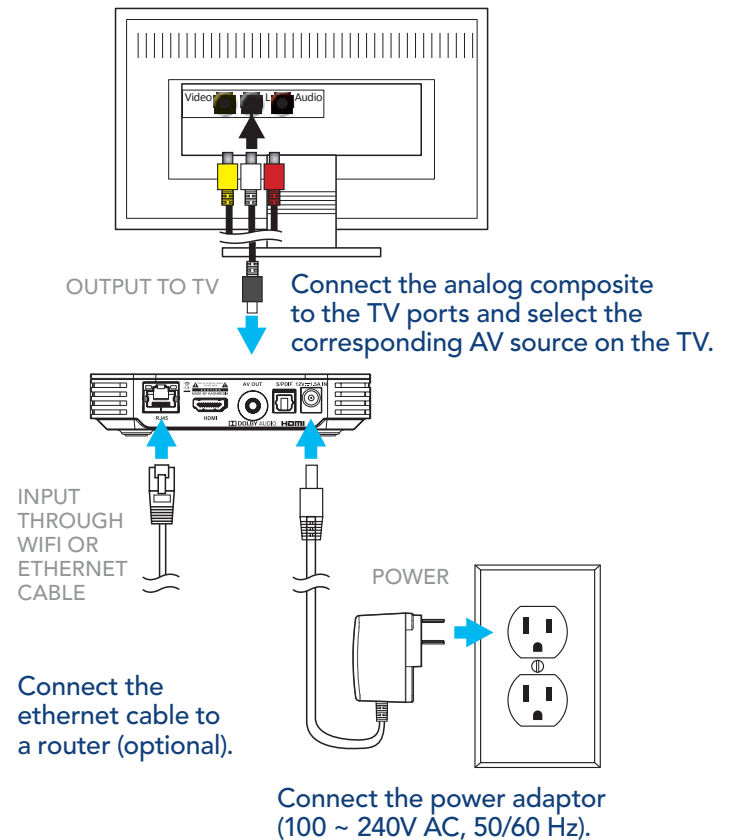


### Network Connection

You must connect your new set-top box to an Internet connection through either a WiFi wireless connection or wired Ethernet connection.

# Network Setup
 
## Wired Network Connection

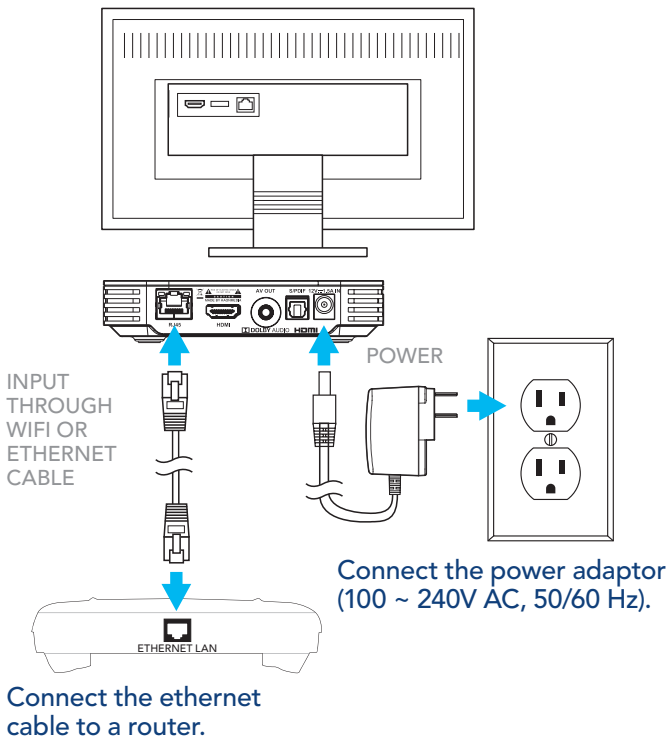

If your home router is near the set-top box location, a CAT-5/5e/6 ethernet cable may be used for Internet connectivity. Plug one end of the CAT-5/5e/6 cable into the set-top box RJ45 port. Plug the other end of the cable into any LAN port of your home router.



## WiFi Network Connection

### WiFi Requirements

WiFi networks should be 802.11n or better (802.11AC/AX preferred).

The set-top box should be placed so that the WiFi signal strength is strong  or very strong  (as a minimum). If the signal strength weak, consider moving the router and set-top box (STB) closer to one another. If the router/STB repositioning is not possible, WiFi extension, MoCA extension, or physical cable connection must be considered. Cables must be CAT-5/5e/6 compliant.

### Connect automatically using WPS

Navigate to the Android main menu by pressing the following key sequences:

Home → Settings → Network  
→ WiFi → SELECT to enable.

Once WiFi has been enabled, using the remote, scroll down and select CONNECT VIA WPS.

Once selected, press the WPS button on your home WiFi router. The set-top box will automatically connect to the WiFi network.

### Connect Manually

If your home WiFi router does not have a WPS button, you can connect manually. Navigate to the Android main menu by pressing the following key sequences:

 
Home → Settings → Network  
→ WiFi → SELECT to enable.

Once WiFi has been enabled, using the remote, scroll down and select the required network and press **OK**. When prompted, enter your WiFi password using the remote or a USB keyboard plugged into the USB port of the set-top box.


# Initial Box Power On

---

The following screens describe the remote key sequences required to setup the set-top box. When powered up and fully booted, the box will start on this screen:

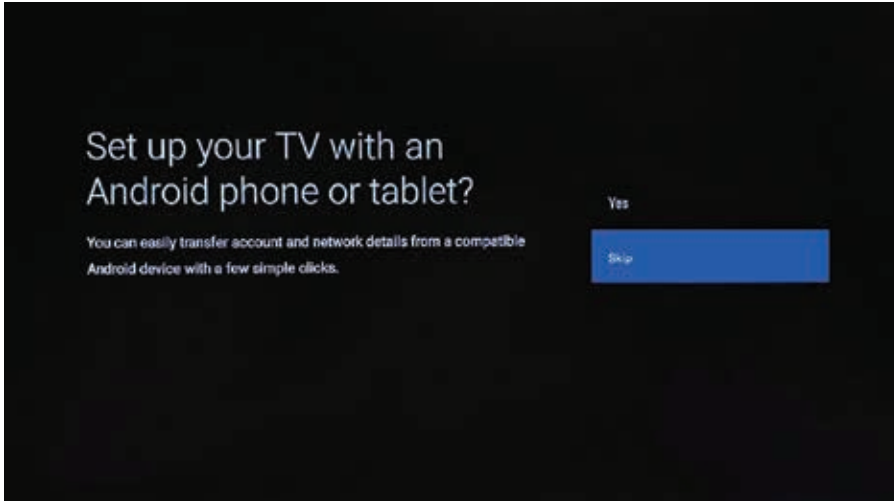


 Select SKIP and press **OK** to continue. The following screen will be displayed:

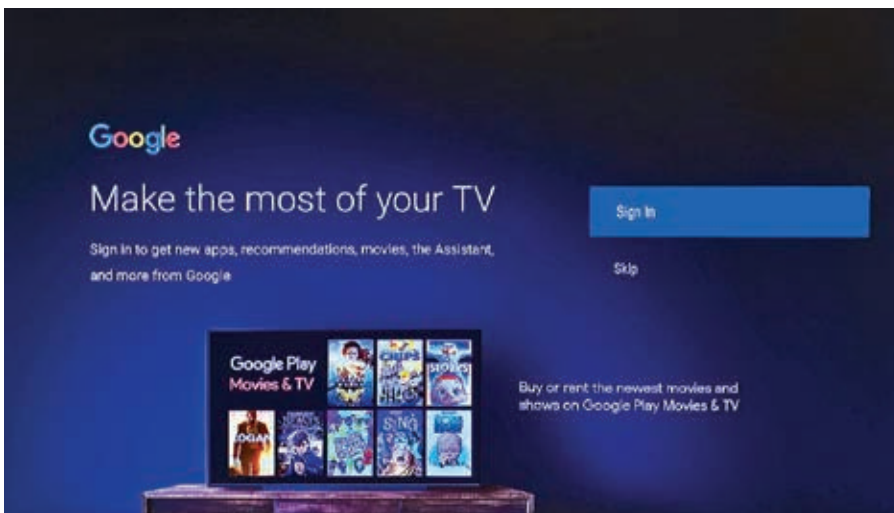


If you wish to login with your Google ID, you may do so at this point. If not, select SKIP and press **OK** to continue.

 
Once logged in, the following **Terms of Service** screen will be displayed. Select **ACCEPT** and press **OK** to continue.

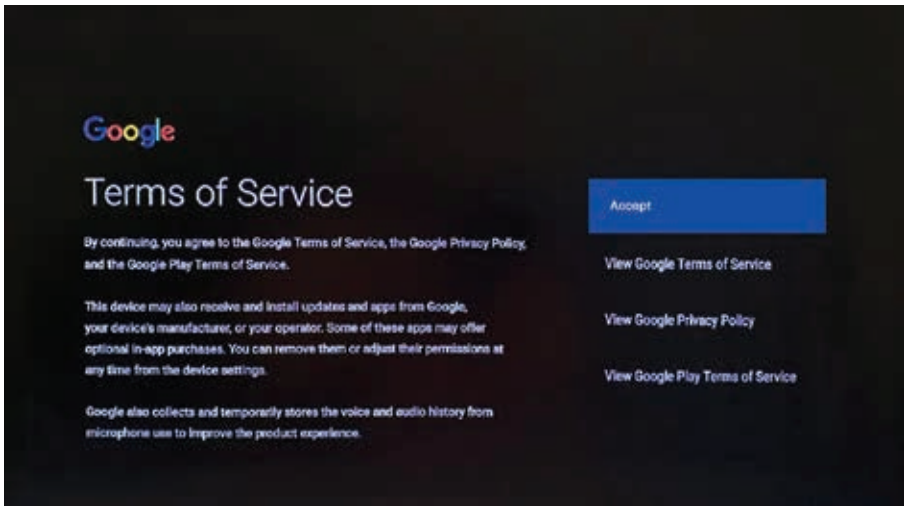

 
Select **YES** on the **Location** screen and press **OK** to continue.

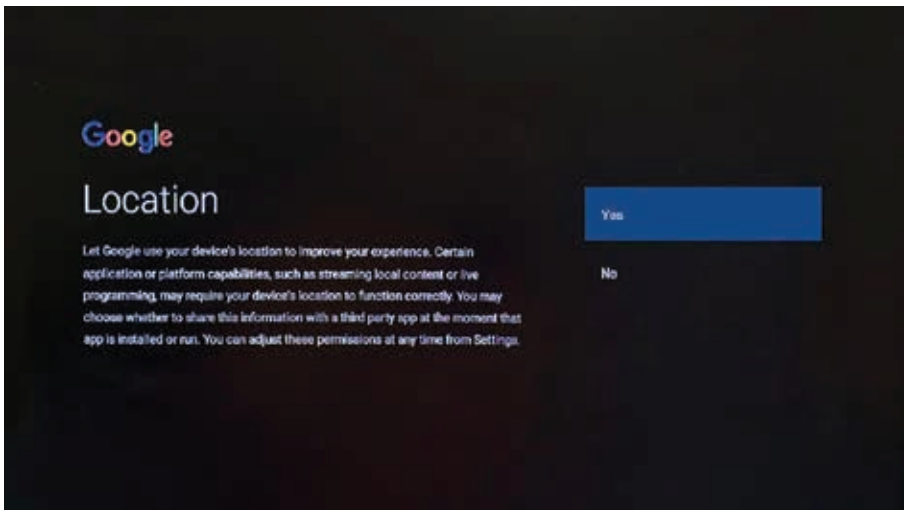

 
On the **Help Improve Android Performance** screen, select YES and press **OK** to continue.

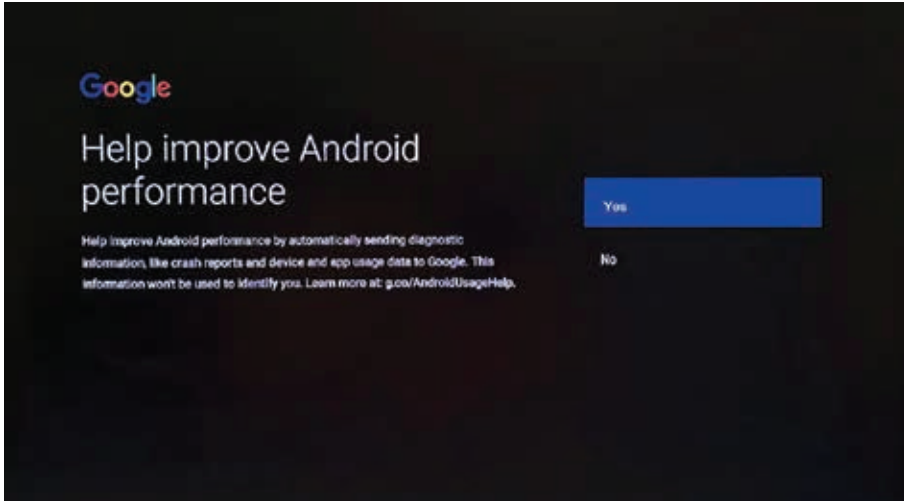

 
On the **Choose a Name** screen, select the appropriate name for the unit and press **OK** to continue.

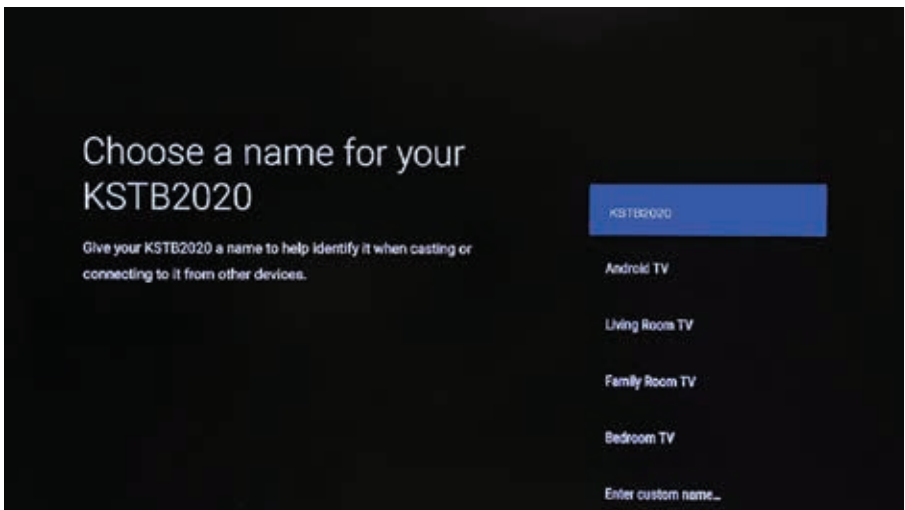

 
The following **Get Started** screen displays where the StreamTV app will be located. This app cannot be de-selected. Select CONTINUE and press **OK** to get to the next screen.

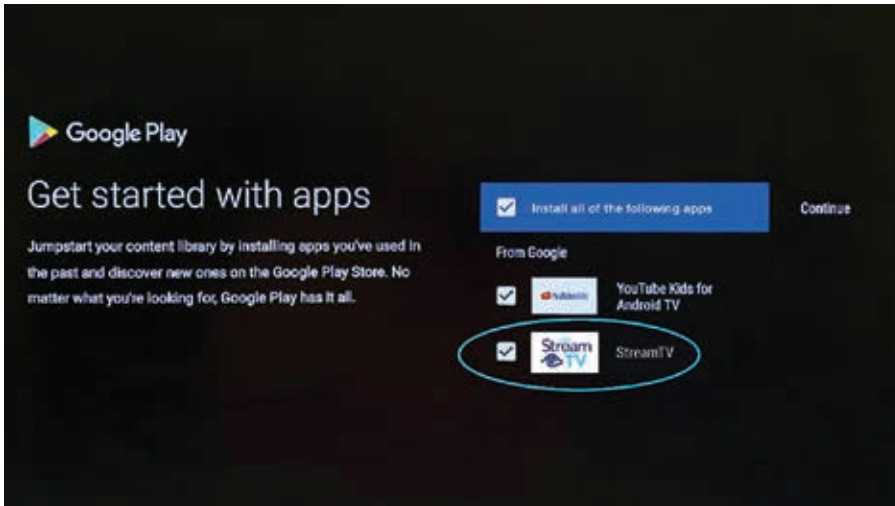

 On the **Welcome** screen, press the right arrow key ( > ) five times to get to the next screen.

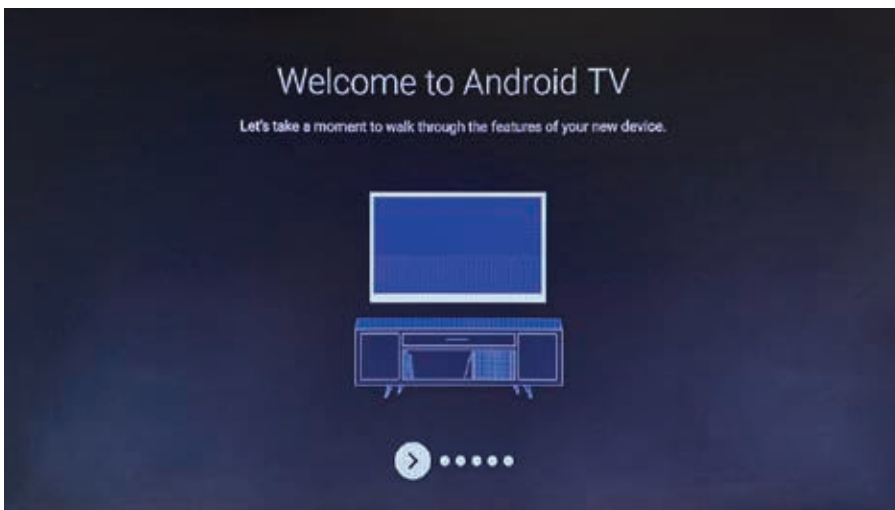

 
Select **DONE** and press **OK** to continue.

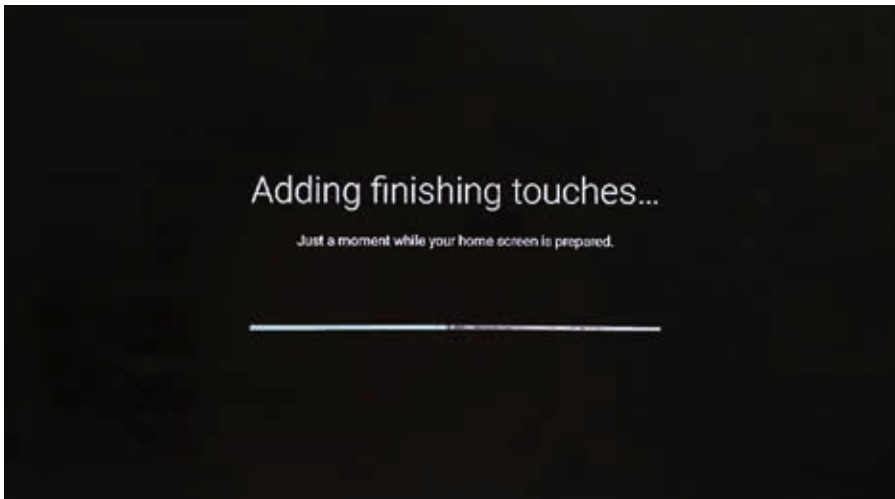


When it is finished processing, the next screen will be the **Login** screen.



 On the Login screen, enter your credentials using the remote or via a USB keyboard (recommended).

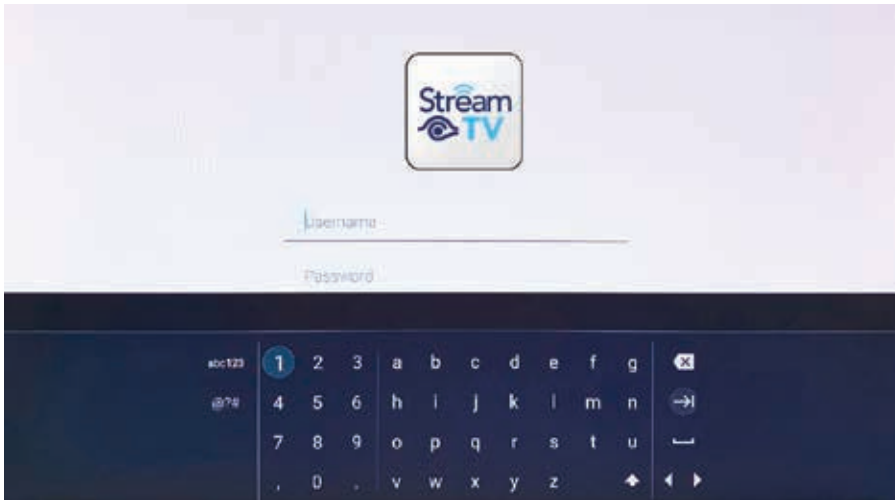

 After you log in, the following screen will be displayed. Select details to be prompted for the WiFi network section and sign in. Alternatively, an ethernet cable may be connected at this time.

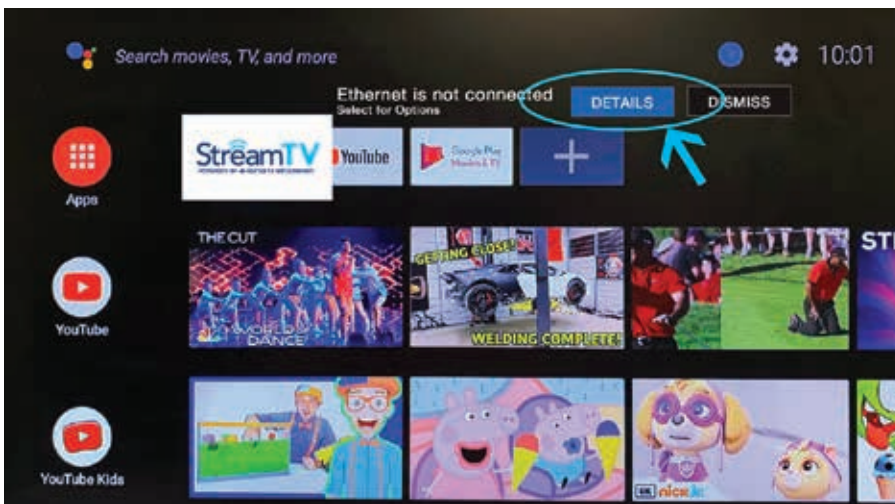

# Service Validation

---

## RCU/STB OPERATION

Once the set-top box (STB) has been installed and credentials have been entered, confirm that the remote works as expected with the STB. Check the following buttons for correct operation:

- Volume up/down
- Channel up/down
- Menu
- Home
- Guide

## GENERAL VIDEO QUALITY

Please validate that the overall video quality is as expected. If possible, tune to a channel with fast moving scenes (e.g., a football or hockey game).

## SIGNAL STRENGTH VALIDATION

Signal strength may be checked via the network sub-menu in the Android main menu.

Using the remote and Android menu, navigate to the following:

 Home →  Settings →  Network

Ensure that the WiFi network signal strength is strong  or very strong .

# Troubleshooting

Observation	Things to Check	Remediation
Video/audio quality is poor on set-top box (STB) or network connection error is displayed.	WiFi signal strength in <b>STB Network Connection</b> menu. <i>Ideal for consistent video:</i> 🟩 Very strong WiFi signal 🟨 Strong WiFi signal  <i>Video may buffer frequently or will not be consistent:</i> 🟡 Medium WiFi signal 🟠 Weak WiFi signal	Relocate router and STB closer in proximity with each other if possible, so that signal is strong or very strong.  Connecting the STB to the home router with a CAT-5/5e/6 cable will also resolve poor WiFi connection.  If video or audio quality is still poor after correcting the network, contact Buckeye Broadband customer service.
	Ethernet cable integrity	If wired ethernet connectivity is used, reset/replace the ethernet cable as needed.
	Router integrity	Power cycle STB and router.
	HDMI/Analog composite cable integrity and connection	Reset/replace cable as needed.
	TV HDMI port integrity	Use different TV HDMI port if possible.
	If possible, compare suspect STB A/V quality to another device such as a Blue-ray player.	If the STB is found to show issues while no other devices do, contact Buckeye Broadband customer service.
Video is not visible on the TV	HDMI port connection is aligned with the TV's HDMI port selection	Ensure HDMI port connection and HDMI port selection are the same.
Remote does not control STB, TV, or audio equipment	Battery charge	Replace batteries if charge is low.
	Remote is not programmed to TV or audio system	Refer to page 8 for remote pairing instructions.
	A remote control button press always activates the LED light at the top of the remote. <b>Red</b> = IR command   <b>Green</b> = RF command	If NO LED light is visible on button presses, the batteries should be changed.

# Appendix A: TV Codes for Remote Pairing

## TOP 10 U.S. TV BRANDS

TV Maker/Brand	Code Number										
Samsung	10305	10265	10001	10012	10051	10092	10011	10118	10124	10132	10145
	10176	10221	10306	10542	10315	10439	10479	10408	10543		
LG (Goldstar)	10011	10093	10103	10113	10118	10132	10346	10315	10439		
Sony	10043	10075	10117	10130	10067	10170	10238	10247	10309	10409	10452
Vizio	10011	10315	10351	10530							
Panasonic	10076	10010	10038	10057	10005	10148	10150	10169	10308	10359	10485
Sharp	10260	10020	10025	10028	10033	10034	10132	10151	10235	10236	10361
	10375	10436	10011								
Toshiba	10021	10013	10035	10041	10052	10063	10092	10142	10146	10178	10179
	10393	10303	10464	10419	10517						
Dynex	10091	10347	10366								
TCL	10256	10371	10267								
Skyworth	10522										

## OTHER TV BRANDS

TV Maker/Brand	Code Number										
3M	10368										
A Mark	10103	10132	10388								
Action	10370										
Admiral	10436	10431									
Advent	10135	10339									
Adventura	10372										
Afron	10373										
Aiko	10374										
Aiwa (R-44A)	10082	10183									
Akai	10148	10160	10001	10317	10318	10348	10352	10542	10439	10476	10517
Alaron	10376										
Albatron	10377										
Ambassador	10378										
America Action	10380										
Ampro	10070	10164	10249	10381							

TV Maker/Brand	Code Number										
<b>Amstrad</b>	10053										
<b>Anam</b>	10045	10055	10057	10076	10095	10099	10103	10109	10112	10143	10380
<b>AOC</b>	10088	10363	10367	10001	10011	10103	10330	10439			
<b>Aomni</b>	10354										
<b>Apex</b>	10302	10303	10282								
<b>Apex Digital</b>	10303	10373	10384								
<b>Archer</b>	10388										
<b>Astar</b>	10390										
<b>Audiovox</b>	10345	10319	10380	10374	10388						
<b>Aurora Systems</b>	10391										
<b>Aventura</b>	10311										
<b>Belcor</b>	10001	10011	10315								
<b>Bell &amp; Howell</b>	10393										
<b>Benq</b>	10395	10396									
<b>Blaupunkt</b>	10084										
<b>Blu: Sens</b>	10476	10455	10499								
<b>Bradford</b>	10380										
<b>Brilliant</b>	10398										
<b>Brockwood</b>	10011	10315									
<b>Broksonic</b>	10143	10166	10174	10431							
<b>Bush</b>	10399										
<b>Byd: Sign</b>	10400										
<b>Candle</b>	10001	10002	10003	10011	10439	10372	10543				
<b>Canon</b>	10402	10403									
<b>Capehart</b>	10059										
<b>Carnibale</b>	10001	10439									
<b>Carver</b>	10415	10405									
<b>Casio</b>	10406	10407									
<b>CCE</b>	10408										
<b>Celebrity</b>	10409										
<b>Celera</b>	10303										
<b>Cetronic</b>	10045										
<b>Changhong</b>	10303										
<b>Citizen</b>	10001	10002	10003	10011	10045	10092	10094	10132	10439	10374	10372
	10543	10517									
<b>Clarion</b>	10380										
<b>Classic</b>	10045										

TV Maker/Brand	Code Number										
<b>Coby</b>	10412	10011	10275								
<b>Commercial Solutions</b>	10413										
<b>Compaq</b>	10414										
<b>Concerto</b>	10011	10543									
<b>Contec</b>	10041	10045	10051	10052	10380						
<b>Corena System</b>	10301										
<b>Coronado</b>	10132										
<b>Craig</b>	10045	10055	10157	10049	10159	10380	10258				
<b>Crosley</b>	10415										
<b>Crown</b>	10045	10132	10380								
<b>Curtis Mathes</b>	10001	10092	10011	10132	10365	10413	10415	10393	10319	10436	10542
	10439	10368	10504	10543	10271						
<b>CXC</b>	10045	10380									
<b>Cyberhome</b>	10416										
<b>Cytron</b>	10417	10418									
<b>Daewoo</b>	10011	10022	10023	10038	10045	10046	10056	10068	10073	10094	10098
	10102	10105	10108	10111	10114	10116	10118	10119	10127	10132	10246
	10319	10374	10315	10188							
<b>Daytron</b>	10011	10132	10315								
<b>Dell</b>	10148	10314									
<b>Delta</b>	10419										
<b>Denon</b>	10368	10421									
<b>Diamond Vision</b>	10422	10423									
<b>Digi Link</b>	10172										
<b>Digistar</b>	10424										
<b>Digital Lifestyles</b>	10425	10426									
<b>Digital Projection, Inc.</b>	10427	10429									
<b>Dream Vision</b>	10430										
<b>Dumont</b>	10011										
<b>Durabrand</b>	10431	10380	10315	10311	10434	10388	10435				
<b>DWIN</b>	10436										
<b>Dynasty</b>	10045										
<b>Dynatech</b>	10063										
<b>Dynex</b>	10091	10347	10366								
<b>Eiki</b>	10253	10402									
<b>Electrograph</b>	10354	10486									
<b>Electroband</b>	10409										

TV Maker/Brand	Code Number										
<b>Electrohome</b>	10074	10132	10431								
<b>Element</b>	10335	10259	10273	10283							
<b>Emerson</b>	10001	10012	10013	10029	10033	10045	10048	10049	10051	10052	10091
	10011	10132	10137	10139	10141	10157	10140	10184	10185	10186	10187
	10188	10190	10192	10193	10194	10195	10196	10197	10198	10199	10200
	10201	10202	10355	10393	10319	10431	10380	10315	10311	10505	
<b>Emprex</b>	10425										
<b>Envision</b>	10439	10358	10330								
<b>Envixion</b>	10001										
<b>Epson</b>	10364										
<b>Erae</b>	10442										
<b>ESA</b>	10317	10318	10311								
<b>Fisher</b>	10013	10058	10393								
<b>Fujitsu</b>	10149	10228	10333	10334	10376						
<b>Funai</b>	10033	10045	10380	10311	10376	10452					
<b>FutureTech</b>	10045	10380									
<b>Gateway</b>	10310	10486									
<b>GE</b>	10001	10014	10015	10038	10057	10070	10083	10011	10121	10133	10141
	10145	10413	10319	10315	10489	10484					
<b>Gilbralter</b>	10001	10011	10439	10315							
<b>Go Video</b>	10443	10479	10476								
<b>Goodmans</b>	10445										
<b>GPX</b>	10276										
<b>Gradiente</b>	10040										
<b>Grundig</b>	10288	10289									
<b>Grunpy</b>	10380	10376									
<b>GVA</b>	10278										
<b>H&amp;B</b>	10301										
<b>Haier</b>	10026	10322	10323	10324	10325	10326	10434	10373	10067		
<b>Hall Mark</b>	10011	10315									
<b>Hanns.G</b>	10447										
<b>Hannspree</b>	10448	10449	10447	10263	10264						
<b>Harley Davidson</b>	10451	10376	10452								
<b>Harman Kardon</b>	10034	10180	10181	10415							
<b>Harvard</b>	10380	10453									
<b>Havermy</b>	10436										
<b>Helios</b>	10301										

TV Maker/Brand	Code Number											
Hello Kitty	10319											
Hewlett Packard	10456	10330	10458									
HISENSE	10266	10011	10279	10280	10373	10459	10462					
HITACHI	10017	10011	10015	10016	10001	10018	10029	10043	10072	10132	10144	
	10147	10203	10204	10206	10207	10208	10210	10211	10368	10452	10543	
HP	10357											
Humax	10143											
Hyperion	10011											
Hyundai	10460	10461										
I-Inc	10463											
ILO	10091	10343	10362	10356								
Infinity	10415	10148										
Infocus	10464	10364	10466	10467								
Initial	10356											
Inkel	10120											
Insignia	10091	10366	10311	10417	10274							
JBL	10148	10415										
JCPenny	10001	10011	10014	10015	10030	10035	10092	10132	10145			
Jensen	10019	10234										
JVC	10261	10270	10038	10040	10079	10239	10550					
Kawasho	10470											
KDS	10335											
KEC	10045	10380										
Kenwood	10001	10229	10011	10439	10315							
Klegg	10354											
KLH	10341	10303										
Kloss	10002	10060	10001	10372								
KMC	10132											
Knoll Systems	10467											
Konka	10473	10475	10476	10477								
Kost	10478	10479										
Kreisen	10480	10479										
KT	10001	10045	10132	10140	10308							
KTV	10380	10439										
LG (Goldstar)	10011	10093	10103	10113	10118	10132	10346	10315	10439			
Lloyd's	10452											
Lodgenet	10069											



TV Maker/Brand	Code Number										
Loewe	10481										
Logik	10069										
Luce	10358	10483									
Luxman	10011	10543									
LXI	10013	10021	10053	10034	10145	10148	10413	10415	10393	10303	10315
Magnasonic	10001	10011	10348								
Magnavox	10001	10003	10011	10060	10061	10062	0064	10065	10066	10086	10088
	10118	10132	10145	10148	10192	10212	10236	10244	10312	10332	10415
	10439	10356	10505	10452	10330	10376	10126				
Magnin	10484										
Marantz	10001	10074	10148	10415	10439						
Matsui	10148										
Matsushita	10485										
Maxent	10486	10487									
MB Quart	10315										
Megatron	10315	10368	10388	10435							
Memorex	10013	10069	10091	10011	10393	10431	10315	10376	10516		
Metz	10084										
MGA	10001	10011	10033	10044	10050	10074	10315	10439	10484		
Midland	10413										
Minerva	10084										
Mintek	10356										
Mitsubishi	10216	10011	10030	10033	10034	10041	10044	10089	10115	10160	10167
	10168	10214	10001	10245	10436	10315					
Monivision	10377										
Montgomery Ward	10185	10217	10218	10219	10220						
Motorola	10436	10335									
Moxell	10335										
MTC	10001	10011	10439	10315	10543						
Multitech	10380										
NAD	10021	10031	10303	10315	10543						
Nakamichi	10491										
Naxa	10492										
NEC	10001	10013	10022	10025	10030	10041	10057	10121	10125	10011	10235
	10439	10315	10543	10405							
NetTV	10486										
Nikei	10045										

TV Maker/Brand	Code Number										
Nikko	10001	10315	10439	10374							
Niko	10493										
Noblex	10494										
Norcent	10373	10330	10495	10493							
Norwood Micro	10362	10498									
NTC	10374										
NuVision	10502										
Olevia	10011	10342	10535	10315							
Olympus	10503										
Onwa	10045	10380									
Optonica	10025	10034	10235								
Optimus	10485	10393	10504	10505							
Optoma	10506	10448									
Optonica	10436										
Orion	10431	10376	10516								
Panasonic	10076	10010	10038	10057	10005	10148	10150	10169	10308	10359	10485
Penney	10001	10011	10413	10303	10315	10439	10484	10489	10388		
Philco	10001	10003	10011	10030	10045	10057	10060	10061	10064	10065	10118
	10132	10148	10415	10439	10315						
Philips	10148	10321	10011	10040	10060	10067	10132	10145	10001	10222	10003
	10371	10415	10479								
Pilot	10001	10011	10439	10315							
Pioneer	10504	10024	10029	10031	10032	10011	10248	10254	10304	10001	
Polaroid	10335	10338	10339	10340	10341	10303	10417	10362	10478	10301	10476
Portland	10011	10132	10374	10315	10335	10424	10476				
Proscan	10133	10249	10413	10262	10257	10268	10067	10269			
Proton	10059	10011	10103	10132	10165	10251	10315	10388			
Protron	10507	10508									
Proview	10335										
Pulsar	10011	10315									
Puneet	10425										
PVision	10442										
Quasar	10038	10057	10243	10308	10485						
Radio Shack	10025	10045	10048	10011	10118	10132	10001	10235			
RCA	10001	10004	10006	10011	10029	10030	10057	10083	10133	10145	10161
	10171	10232	10371	10413	10484	10315	10256	10272			

TV Maker/Brand	Code Number										
Realistic	10013	10025	10045	10048	10001	10011	10235	10393	10380	10315	10439
	10543										
Revolution HD	10354										
Roctec	10237										
Runco	10152	10153	10001	10250	10252	10336	10337	10439			
Sampo	10001	10059	10011	10486	10439						
Samsung	10305	10265	10001	10012	10051	10092	10011	10118	10124	10132	10145
	10176	10221	10306	10542	10315	10439	10479	10408	10543		
Sansui	10431	10452	10516	10517							
Sanyo	10013	10026	10027	10037	10041	10054	10058	10078	10253	10393	10402
	10484										
Sceptre	10313	10067									
Scimitsu	10011	10315									
Scott	10033	10045	10049	10011	10132	10380	10315	10376			
Scotch	10315										
Sears	10011	10013	10021	10033	10035	10058	10078	10092	10132	10145	10244
	10413	10415	10393	10303	10315	10311	10543	10376	10452		
Seiki	10259	10283	10284	10285	10286	10287					
Seleco	10368	10430									
Sharp	10260	10020	10025	10028	10033	10034	10132	10151	10235	10236	10361
	10375	10436	10011								
Sharper Image	10518										
Sherwood	10120										
Shogun	10011	10315									
Siemens	10084										
Signature	10069	10011									
Signature 2000	10011										
Signet	10519	10478	10520								
Sim2 Multimedia	10430										
Simpson	10001										
Skyworth	10522										
Solarism	10523										
Sole	10358	10483	10301	10479	10354						
Sony	10043	10075	10117	10130	10067	10170	10238	10247	10309	10409	10452
Soundesign	10003	10033	10045	10011	10380	10315	10376				
Sova	10507										
Soyo	10425	10463	10524	10525	10479						

TV Maker/Brand	Code Number										
<b>Spectricon</b>	10103	10011	10388								
<b>Spectroniq</b>	10335										
<b>Squareview</b>	10311										
<b>SSS</b>	10011	10045	10380	10315							
<b>Starlite</b>	10011	10380									
<b>Studio Experience</b>	10377										
<b>Sunbrite</b>	10528	10529									
<b>Superscan</b>	10436	10530									
<b>Supremacy</b>	10002	10372									
<b>Supreme</b>	10409										
<b>SVA</b>	10373	10479	10301	10532	10533						
<b>Sylvania</b>	10001	10003	10008	10011	10060	10061	10064	10118	10126	10065	10145
	10148	10155	10311	10355	10415	10439					
<b>Symphonic</b>	10380	10311	10452	10505							
<b>Syntax</b>	10342	10535	10315								
<b>Tandy</b>	10034	10436									
<b>Tashiko</b>	10537										
<b>Tatung</b>	10057	10063	10388	10458	10362						
<b>TCL</b>	10256	10371	10267								
<b>Teac</b>	10379	10281									
<b>Technics</b>	10080	10076	10485								
<b>Technol Ace</b>	10376										
<b>Techview</b>	10539	10541									
<b>Techwood</b>	10011	10388	10543								
<b>Telemagic</b>	10402										
<b>Teknika</b>	10001	10002	10003	10011	10030	10033	10036	10045	10069	10074	10092
	10094	10132	10415	10380	10374	10315	10543	10376			
<b>Telefunken</b>	10039	10047	10241	10242	10542	10543	10544				
<b>Telerent</b>	10069										
<b>Tera</b>	10156										
<b>Thomas</b>	10452										
<b>TMK</b>	10011	10315	10543	10378							
<b>Toshiba</b>	10021	10013	10035	10041	10052	10063	10092	10142	10146	10178	10179
	10393	10303	10464	10419	10517						
<b>Totevision</b>	10132										
<b>TruTech</b>	10353										
<b>TVS</b>	10431										

TV Maker/Brand	Code Number										
Ultra	10547	10508									
Universal	10014	10015									
Upstar	10277										
US Logic	10362										
Vector Research	10001	10439									
Venturer	10315										
Victor	10550										
Video Concepts	10160										
Vidikron	10255	10415									
Vidtech	10011	10315									
Viewsonic	10363	10088	10330	10331	10349	10486	10530	10503			
Viking	10372										
Viore	10316										
Visart	10551										
Vito	10360										
Vizio	10011	10315	10351	10530							
Wards	10011	10014	10015	10025	10033	10061	10062	10064	10065	10069	10071
	10132	10148	10001	10235	10415	10315	10439	10489	10543	10376	
Waycon	10303										
White Westinghouse	10091	10319	10320	10327	10328	10329	10067	10431	10409		
Winbook	10362										
Wooyoung	10307										
Wyse	10330										
Xoceco	10552										
Yamaha	10001	10011	10439	10315							
York	10011										
Zenith	10009	10069	10070	10090	10094	10431	10315	10374	10452	10516	
Zonda	10103	10388									

# Appendix B: Audio Codes for Remote Pairing

Audio Maker/Brand	Code Number										
<b>Adcom</b>	20088	20098	20218	20147	20233						
<b>Aiwa</b>	20142	20182	20025	20141	20022	20110					
<b>Akai</b>	20128										
<b>Anam</b>	20026	20188	20189								
<b>Anthem</b>	20004										
<b>B&amp;K</b>	20102	20103									
<b>Bose</b>	20007	20185	20131								
<b>Carver</b>	20253	20013	20037	20060	20068	20148	20221	20226	20245	20250	20015
<b>Clarion</b>	20132										
<b>Coby</b>	20010	20017									
<b>Denon</b>	20041	20234	20111	20149	20150	20152	20232	20003			
<b>Enlightened</b>	20105										
<b>Everquest</b>	20032										
<b>Fisher</b>	20037	20015	20083	20207							
<b>Fosgate Audionic</b>	20153										
<b>Haier</b>	20019	20023									
<b>Harman Kardon</b>	20205	20208	20153	20228	20229	20249					
<b>Hitachi</b>	20035	20040	20027	20202							
<b>iLive</b>	20049	20050									
<b>Inkel</b>	20012										
<b>Insignia</b>	20061										
<b>JCPenny</b>	20016	20108									
<b>Jensen</b>	20065										
<b>JVC</b>	20112										
<b>Kenwood</b>	20012	20206	20231	20033	20015	20211	20212	20213	20214	20215	20222
	20230	20134	20246								
<b>Lexicon</b>	20125	20156	20158	20159							
<b>LG (Goldstar)</b>	20069	20077	20018	20192							
<b>Lotte</b>	20191	20193									
<b>Luxmam</b>	20042										
<b>LXI</b>	20084										
<b>Magnavox</b>	20013	20092									
<b>Marantz</b>	20013	20093	20047	20072	20063	20203	20221	20250			

Audio Maker/Brand	Code Number										
Maxell	20078										
McIntosh	20160										
MCS	20016										
Mitsubishi	20164	20165									
NAD	20036										
Nakamichi	20167	20047									
Niles	20168										
Onkyo	20178	20053	20113	20114	20024	20177	20179	20223	20224	20251	
Optimus	20029	20033	20048								
Outlaw	20183										
Panasonic	20126	20014	20039	20094	20194	20200					
Parasound	20254										
Philips	20009	20301	20302	20303	20093	20013	20172	20124			
Pioneer	20082	20021	20046	20051	20057	20073	20076	20096	20001	20054	20237
	20238	20239	20240	20241	20242	20243	20244				
Proceed	20006	20248	20252								
Quasar	20014	20094									
RCA	20062	20106	20120	20138	20056	20123					
Realistic	20011	20030	20084	20002	20026	20101					
Rotel	20089	20080	20091								
Samsung	20304	20197	20198	20199	20306						
Sansui	20116	20013	20124	20047							
Sanyo	20187										
Scott	20026	20097									
Sharp	20139	20058	20033	20100	20132	20133	20134	20127			
Sherwood	20045	20031	20247								
Sony	20008	20176	20005	20025	20107	20145	20090	20170	20195	20209	20216
	20305										
Soundesign	20043										
SSI	20075										
Taekwang	20128	20186	20195								
Teac	20066	20067	20026	20190							
Technics	20126	20094	20109	20014	20137						
Thomson	20217										
Toshiba	20155	20118	20237	20255							
Victor	20020	20112									

Audio Maker/Brand	Code Number										
<b>Vizio</b>	20180										
<b>Wards</b>	20015										
<b>Yamaha</b>	20140	20166	20201	20028	20033	20038	20074	20132	20175	20204	20210
	20219	20220	20227	20235	20236						
<b>Zantek</b>	20174										

## NOTES

---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---